


INSTALLATION INSTRUCTIONS

Iron Strap Installation Instructions

TOOLS NEEDED:

- Power Drill
- 3/32" Drill Bit
- Pencil
- Phillips Head Screw-Driver
- Sealant or Epoxy

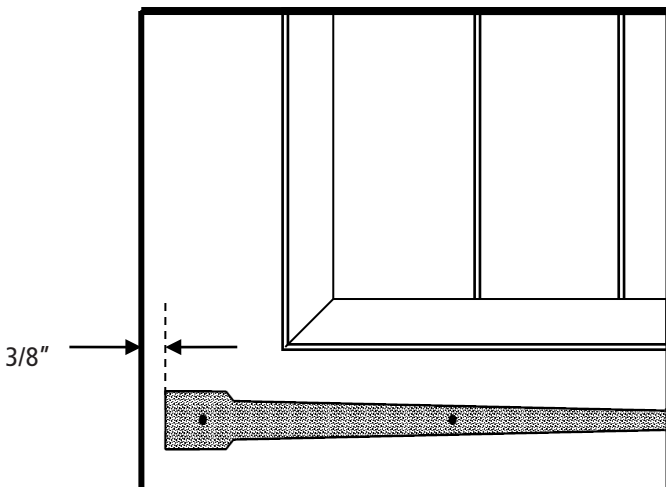

INSTALLATION INSTRUCTIONS:

1. Place Strap Hinge 3/8" from edge of door at the desired locations
2. Mark holes at screw locations w/ pencil
3. Drill 3/32" holes through the door or door skins approximately 1" deep.
4. Fill holes with sealant or epoxy
5. Hand Tighten Strap Hinges with # 8 Screws using a Phillips Head screwdriver flush to the face of the door (DO NOT seat screws with power drill or power driver)
6. Wipe off any excess sealant or epoxy